

ROOF MAKER


WORLD CLASS ROOFLIGHTS

Call us: 0116 269 6297

Mon-Fri 9-5pm

REMOTE CONTROL PROGRAMMING GUIDE FOR OPENING ROOFLIGHTS

Before you receive your rooflight, the remote controls should be synchronised to your control box in advance. Should you experience any issues with the controls when your rooflight is powered up, this guide takes you through some simple steps to make sure your remotes are synchronised correctly.

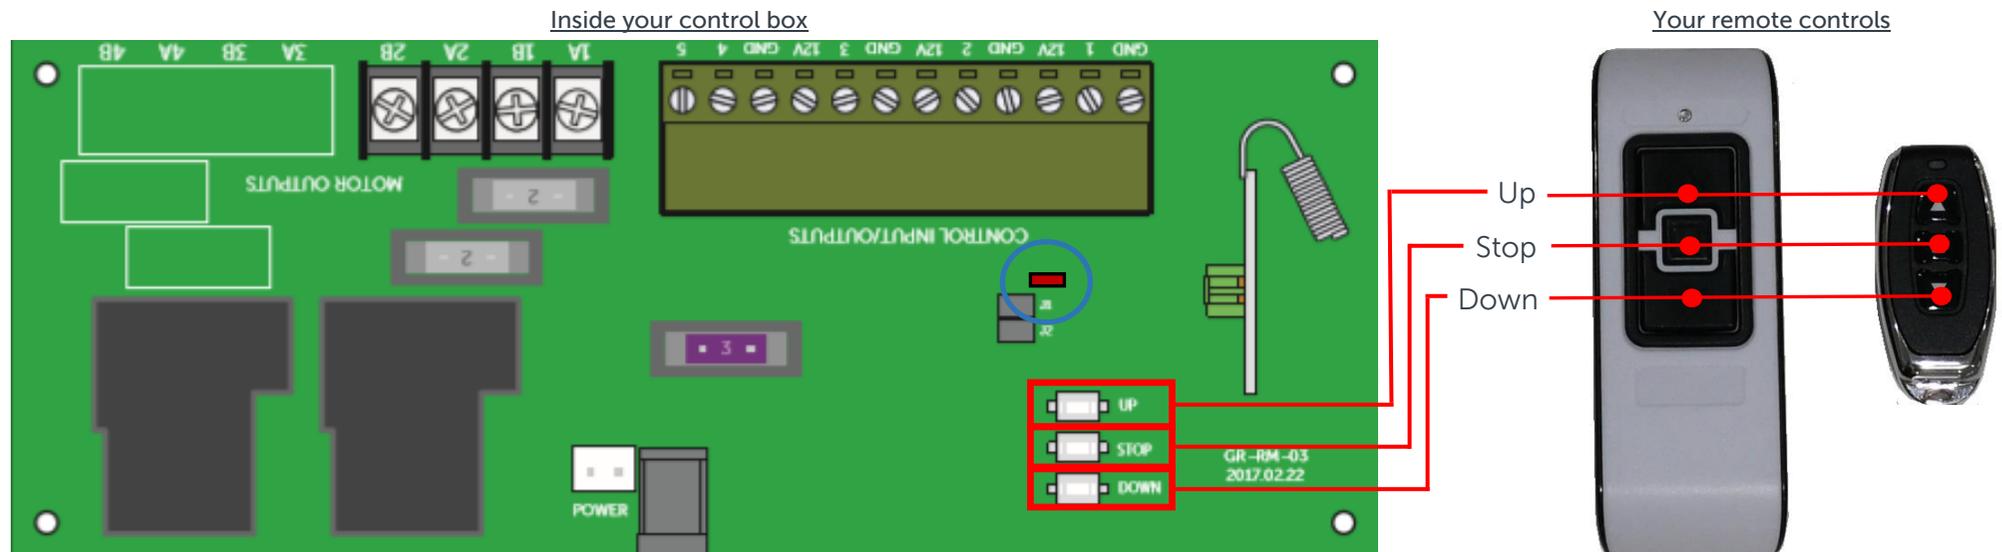

Synchronising your remote control

- Press the UP button on the control box, the red LED will light up (circled in blue)
- Press and hold the UP button on the remote, until you hear the clicking sound
- When you hear the clicking sound, this means that the functions have been paired
- Repeat this same process for the STOP and DOWN function, for both remote controls

Deleting your remote control (if required)

- Press the UP button on the control box, holding it for approx. 15 seconds until you hear the clicking sound
- The clicking sound indicates that any remote paired to the control box has been wiped from the memory
- To add a new remote control, follow the 'synchronising your remote control' process again.